

Two LEDs indicate the operating status under different circumstances and possible mal-functions in the Solar Charger Unit.

LED green	LED red	During the day	During the night	Additional instructions
1. OFF	OFF		no charging current	deep discharge protection not activated
		no charging current		Module terminals reverse connected; load short-circuit.
		check slim-line fuse	check slim-line fuse	replace slim-line fuse
			load does not work, although fuse is OK	Solar Charger Unit faulty
2. ON	OFF	charger current, battery being charged		green LED intensity reduces as full status is being reached
			green LED lights bright	Solar Charger Unit faulty
3. OFF	ON		Battery deep - discharged	load is disconnected
		no charging current		check terminals and fuses
4. ON	ON	Battery is deep discharged; charging current present		load reconnects automatically after reaching reset voltage

Specifications

Normal voltage:	12/24V (automatic battery voltage recognition)
Charging current (solar cells):	20 A
Max. Load:	20 A
Max. Power use:	4 mA
Temperature sensor	on external cable

Gas control deactivated (factory setting)

Boost charge voltage:	14,5 V/29 V
Float charge voltage:	13,7 V/27,4 V
Charging voltage restart at:	12,4 V/24,8 V

Gas control activated

Charging voltage:	14,1 V/28,2 V
-------------------	---------------

Deep discharge disconnection

DC output disconnected at:	11,1 V/22,2 V
DC output reconnected at:	12,6 V/25,2 V

Temp. compensation	-4 mV/K/cell
--------------------	--------------

Fuse:	20 A
Temperature range:	-25 °C - +50 °C
Measurements (L x B x H):	175 x 107 x 45 mm
Weight:	330 g (without packaging)

Subject to alteration

July 2010



OPERATING INSTRUCTIONS

PSR20 type solar charge controller
12/24 V - 20A



Dear Customer,

Thank you for buying our product. You have bought one of the most powerful, compact and reliable units of its class. Please read the operating instructions carefully before use.

WARNING!!! Safety Instructions!!!

- Do not use the unit:
In places, which are dusty, damp, in a high-humidity area (over 80% rel. humidity), at temperatures above 50°C, in areas containing inflammable materials (liquids/solvents, gas). Do not immerse in water.
- Use only in closed, dry areas.
- Should the unit fail to operate, or show signs of not operating properly unplug immediately and make sure that the unit is not put into further operation. Do not use the unit when visible signs of damage - due to transport or inadequate storage are noticeable.
- To prevent the risk of explosion by overcharging, install the battery in a well-ventilated place.
- Use only solar cells as power source.
- To prevent a short-circuit between solar charger unit and battery, install a fuse on the positive battery pole.
- Equipment, which on account of its function must not be switched off by means of load disconnection (e.g. navigation lights), must be connected directly to the battery and fused.
- When recharging sealed lead acid batteries, switch off the gas-control (see Factory settings).
- Follow installation instructions strictly when connecting the unit!
- The unit should be disconnected in reverse order (see installation procedures).

Description of operation

Solar Charge Controller Unit 12/24V 20A with:

- 12 / 24 V automatic battery selection
- Dynamic protection against battery deep discharging
- Protection against battery overcharging
- Gas control function for sensitive SLA batteries
- Temperature compensation

The use of lead-batteries is common for the storage of solar energy (photovoltaic solar systems). Lead-batteries require protection against overcharging and deep discharging. This unit satisfies both requirements.

12/24 V automatic battery voltage selection

The solar regulator can be used for 12V and 24V battery systems, manual adjustment is not required, the unit automatically detects battery voltage and adjust itself accordingly. All system components (PV modules, batteries, inverter, DC loads) must be selected for the same voltage (12 or 24V) rating!

Protection against battery deep discharging

Lead-Batteries need to be protected against being deep-discharged, otherwise damage can occur to the battery cells. The solar battery charger unit protects lead-batteries from deep discharging by disconnecting the DC loads when the battery's voltage has decreased to a certain voltage level. As soon as the batteries are recharged by the solar cells, the load is automatically reconnected.

Protection against overcharging

Exceeding the max. charging voltage levels (14,5V or 14.1V) would lead to the formation of gas, which could damage the batteries. The amount of gas developed within the battery depends on the temperature. The inbuilt temperature-sensor automatically regulates the charging voltage in accordance with the temperature in the area of use/operation. The battery is not yet fully charged when the charging voltage is reached. The charging current should not be completely switched off, instead reduced, so that the charging voltage is not exceeded. This is accomplished by the Solar Charger Unit. The charging process - „IU-charging” recharges the batteries evenly and quickly. The „IU-charging” is achieved by a very quick temporary short-circuiting procedure - also known as the pulse-width modulation (PWM) shunt procedure!

Gas control function


As a factory setting, the regulator charges the battery with a 14.5V boost-charge voltage. When this voltage is reached, the controller reduces it charging voltage to 13.7V float charge voltage which will be maintained until battery voltage sinks to 12.4V when the regulator start charging again with 14.5V. Some sealed lead-acid battery types require lower than 14.5V charging voltage as higher voltage would cause undesirable gas formation within the battery. Please consult with your battery manufacturer about the max. battery charging voltage if unsure. In case you should reduce the max. charging voltage you have the possibility to activate the built in gas control function (see “gas control activation” section). By doing so, the regulator uses a lower 14.1V charging voltage which will be maintained during the entire charging cycle with the charging current gradually reduced. This would protect batteries sensitive to higher charging voltage.

Temperature compensation

The temperature compensator circuitry adjusts and regulates the final charging voltage and gas-formation of the batteries in accordance with the temperature in area of use. The sensor has a ca. 1,5m long connecting cable; sensor should be attached to the battery case with the help of a piece of tape.

Connection and operating elements

- 1) Green LED: Charging indication, illuminates when the battery is being charged. At night there is no indication while there is no charging current from the solar modules.
- 2) Red LED: Load disconnected. In case of battery deep discharge the loads are disconnected. As soon as the battery is recharged, the dc loads are switched back on and the LED stops illuminating.
- 3) Temperature sensor
- 4) +/- load connection terminals
- 5) +/- battery connection terminals
- 6) +/- solar module connection terminals
- 7) 20A fuse, prevention against reversed polarity connection of battery terminals, load terminals and overloading.

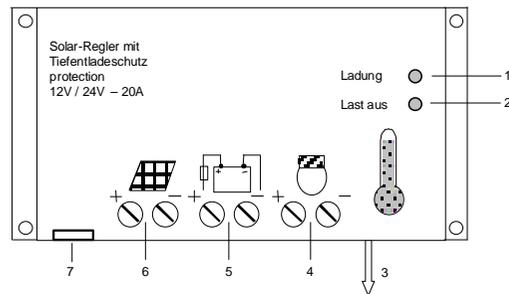

Warning: Should the terminals be reverse polarity connected to the load output, can units <20 A (fused) be completely damaged. Each individual system component must be fused.

Factory settings

Upon delivery is the Solar Charger Unit installed as follows:
- Gas control deactivated (see “gas control function”)

Warning!!!

When charging certain types of *sealed lead acid batteries* make sure that gas control function is activated! Please consult your battery dealer to establish your optimal charging voltage!

gas control activation

1. Remove the 2 screws on the Solar Charger Unit (which keeps the top piece in place) and carefully remove cover.
1. Cut the J6 wire bridge situated on the printed circuit board. The gas-control function is now activated.

Installation - Warning: Make sure of the right polarity!!!

The solar charger unit should be placed in close proximity to the battery and be sufficiently protected against the weather. Take care to place the battery in a well-ventilated place. To guarantee that the unit functions properly it must be connected to the solar generator, the lead-battery and the load.

Each part of the system - solar generator, lead battery, DC load and solar charger unit - should have the same nominal operating voltage (12 or 24V). Please check each component before installation, when in doubt, contact a Specialist! Take careful attention of the following installation instructions:

1. Connect the battery to the corresponding terminals on the solar charger unit. To prevent voltage losses in the cabling, please use min. 6 mm² cable diameter (up to 4m). Only when an additional "short-circuit-protection" device is already installed, can the battery be operated without a fuse. Otherwise must a fuse be connected to the battery +terminal/pole in order to prevent possible short circuit of the battery cables. Both components must be installed close together in the same room.
2. Connect the solar module to the corresponding terminals on the solar charger.
3. Connect the load to the solar charger unit. The connection diagrams are printed on the solar charger.

Battery fully loaded

The LEDs indicate the charge level of the batteries, the actual charging status of the solar cells and possible system faults.

Protection against deep discharge (red LED)

When battery deep discharging occurs, all loads are automatically switched off and the red LED lights. When the battery is recharged, the LED stops illuminating and the loads are re-connected automatically. Now the battery is ready to supply power again.

The Solar System fails to function - possible reasons.

Battery terminals are reverse connected: The fuse has blown, replace with a same type.

Module terminals are reverse connected: Avoid at all costs!!!

Load terminals are reverse connected: The equipment can be seriously damaged before the fuse blows.

Batteries contain considerable amounts of electrical energy. A short-circuit can result in a large build-up of heat leading to FIRE!